

Current Part Number	Previous Part Number	Original Part Number	Description / Device
P10050	P10001	V-23B	Micro USB 6"(Opt3)
P10051	P10027	V-28V	Nikon EP-62F(Opt3)
P10052	P10046	V-26G	7.5V Barrel 1x3x10(Opt3)
P10053	V-25G		Nikon EP-65A (CBM)
P10054	V-25N		Nikon EP-62D (CBM)
P10055	V-28AP		Sony DK-1N (CBM)
P10056	V-29C		3.4V Barrel .7x2.35x11 (CBM)
P10057			Casio NP120(Opt3)
P10059	V-27AN		JVC 2010 Power Plug(Opt3)
P10060	V-27AJ		Nikon EP-62A (CBM)
P10061	V-28AL		CC-NIKON-EP5A(Opt3)
P10062	V-29L		5.25V Barrel 1.7x4x11 (CBM)
P10063	V-24V		9V Barrel 1.7x4.75x10(Opt3)
P10064	P10002	V-28AT	Apple-Black(Opt3)
P10065	P10003		TOMTOM-20Flat(Opt3)
P10066	P10004		8.25V Barrel 1.7x4.75x9.5(Opt3)
P10067	P10005		Fuji-CP20(Opt3)
P10068	P10006		Fuji-CP04(Opt3)
P10069	P10007	V-28Y	Panasonic K2GH2CB(Opt3)
P10070	P10011	V-26U	5V Barrel .7x2.5x10(Opt3)
P10071	P10012	V-27AW	Female USB(Opt3)
P10072	P10013	V-27N	Samsung AA-E(Opt3)
P10073	P10014	V-28W	Nikon EH-66sp(Opt3)
P10074	P10015	V-28G	7.5V Barrel 1x3x8(Opt3)
P10075	P10016	V-27AG	Nikon EP5(Opt3)
P10076	P10017	V-28AM	Cisco 2 Prong(Opt3)
P10077	P10021		Nikon EP-5B(Opt3)
P10078	P10022		Canon CA110(Opt3)
P10079	P10023	V-27AX	Panasonic DCC3(Opt3)
P10080	P10025	V-27R	Sony MicroMV(Opt3)
P10081	P10028	V-24C	5V Barrel 1x3x10.5(Opt3)
P10082	P10029	V-26H	8.25V Barrel 1.35x3.5x10(Opt3)
P10083	P10030	V-24A	Olympus BPC-03L(Opt3)
P10084	P10031	V-24P	Canon CA590(Opt3)
P10085	P10033	V-24T	5.0V Barrel 1.7x475x10(Opt3)
P10086	P10034	V-25W	Casio 2008A1(Opt3)
P10087	P10035	V-28AK	Canon DR-E6(Opt3)
P10088	P10039		Sony MicroMV (VPG)(Opt3)
P10089	P10041	V-26A	5V Barrel 1.7x4x10.5
P10090	P10042	V-21A	Mini USB(Opt3)
P10091	P10043		Kodak Micro USB(Opt3)