


Installing a New Sensor

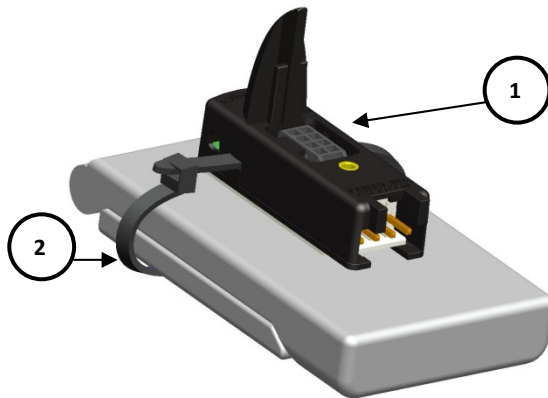

Tips


- Thoroughly clean back of phone with alcohol prep and immediately wipe dry with clean paper towel.
- Apply the 3M primer stick to the back of phone where sensor head will be applied.
- Remove the adhesive liner from the sensor head.

Installation Steps

1. Attach the sensor head to the back of the phone. Ensure the pin on the sensor head is attached to a flat surface.
2. Thread V-53 Tie strap through sensor head and tighten using a V-53G Tie Strap Gun


Note: tie strap should be left in place for 24 hours and then removed.

Attaching the Power Coupler

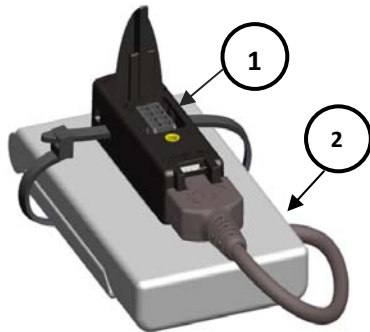

1. Connect the Power Coupler to the sensor head.
2. Connect the other end of the power coupler to the DC input on the phone.

Connecting to the Disconnect Cord Reel

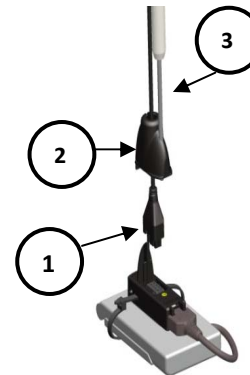

1. Connect the cord reel disconnect to the Flex sensor head.
2. Slide the boot into place.
3. Using the V-T99 small Phillips screw driver, tighten the set screw to secure the boot to the sensor head.